

## REMOVAL AND INSTALLATION

### Ignition Coil-On-Plug

#### Material

Item	Specification
Silicone Brake Caliper Grease and Dielectric Compound XG-3-A	ESE-M1C171-A

#### Removal and Installation

1. Disconnect the 8 ignition coil electrical connectors.
2. Remove the 8 ignition coil bolts.
  - To install, tighten to 6 Nm (53 lb-in).
3. **NOTE:** When removing the ignition coils, a slight twisting motion will break the seal and ease removal.  
Remove the 8 ignition coils.
4. To install, reverse the removal procedure.
  - Apply a light film of brake caliper grease to the inside of the coil boots before installation.