

| |
|-----------------|
| Print this Page |
|-----------------|

FORD

| MODEL | | YEAR(S) |
|---------------------------|---|--|
| MUSTANG | | 2005 -2009 |
| KEY | T-HARNESS | IMMOBILIZER |
| FD KEY-4 | FD-3 | FORD'S SECURILOCK ANTI-THEFT TRANSPONDER SYSTEM, Requires 791 and Extra Ignition Key |
| PART | COLOR | LOCATION |
| 12 VOLT CONSTANT | LIGHT GREEN/PURPLE (+) | IGNITION SWITCH HARNESS |
| STARTER | DARK GREEN (+) | IGNITION SWITCH HARNESS |
| STARTER 2 | N/A | |
| IGNITION 1 | WHITE/YELLOW (+) | IGNITION SWITCH HARNESS |
| IGNITION 2 | N/A | |
| IGNITION 3 | N/A | |
| ACCESSORY/HEATER BLOWER 1 | BLACK/PINK (+) | IGNITION SWITCH HARNESS |
| ACCESSORY/HEATER BLOWER 2 | N/A | |
| KEY SENSE | N/A | |
| PARKING LIGHTS (-) | BLACK/LIGHT GREEN (-) | @ SJB, BLUE 52 Pin Plug, Pin 31, See NOTE *1 |
| PARKING LIGHTS (+) | DO NOT USE! | |
| POWER LOCK | WHITE/PURPLE (TYPE B) | @ SJB, BLACK 26 pin Plug, Pin 3, See NOTE *1 |
| POWER UNLOCK | DARK BLUE/LIGHT GREEN (TYPE B) | @ SJB, BLACK 26 Pin Plug, Pin 1, See NOTE *1 |
| DOOR TRIGGER | YELLOW/LIGHT GREEN (+) | @ SJB, GRAY 26 Pin Plug, Pin 25, See NOTE *1 |
| DOMELIGHT SUPERVISION | LIGHT GREEN/YELLOW (-) | IN PASSENGER KICK PANEL |
| TRUNK RELEASE | WHITE/PURPLE (-) | @ SJB, BLACK 52 Pin Plug, Pin 13, See NOTE *1 |
| SLIDING POWER DOOR | N/A | |
| HORN | DARK BLUE (-) | @ SJB, BLUE 52 Pin Plug, Pin 39, See NOTE *1 |
| TACH | Any wire that is NOT RED | @ any IGNITION COIL or FUEL INJECTORS |
| WAIT TO START LIGHT | N/A | |
| BRAKE | LIGHT GREEN (+) | @ SJB, GRAY 36 Pin Plug, Pin 16, See NOTE *1 |
| FACTORY ALARM DISARM | LIGHT BLUE/BLACK (-) | @ SJB, BLACK 26 Pin Plug, Pin 16, See NOTE *1 |
| ANTI-THEFT | FORD'S SECURILOCK ANTI-THEFT TRANSPONDER SYSTEM | TRANSPONDER @ IGNITION SWITCH TUMBLER |

EXTRA INFORMATION

NOTE *1 The SJB (Smart Junction Box) is located in the PASSENGER KICK PANEL.